# SECTION 5

### MARK | Series

PARTS MAY BE ORDERED DIRECTLY FROM SAVAGE ARMS [PHONE 413-568-7001] BETWEEN THE HOURS OF 9:00 AND 3:30 (EASTERN STANDARD TIME). THERE IS A MINIMUM ORDER AND PLEASE ALLOW 2 WEEKS FOR DELIVERY.

PLEASE BE ADVISED THAT SOME PARTS
MAY REQUIRE FITTING. SAVAGE ARMS
BEARS NO RESPONSIBILITY FOR THE
FUNCTION OR PERFORMANCE OF ANY
FIREARM THAT HAS BEEN REPAIRED OR
MODIFIED BY OTHER THAN SAVAGE ARMS
SERVICE DEPARTMENT. AS SUCH, SAVAGE
ARMS ACCEPTS NO RESPONSIBILITY/
LIABILITY FOR ANY DIRECT AND/OR
CONSEQUENTIAL DAMAGE AND/OR INJURY
RESULTING FROM THE USE OF A FIREARM
REPAIRED OR MODIFIED BY OTHER THAN
THE SAVAGE ARMS SERVICE DEPARTMENT.

## # Description

- 1 Front sight
- 2 Rear sight
- 3 Universal elevator
- 4 Feed ramp RH Feed ramp LH
- "5 Bolt assembly RH Bolt assembly LH
- 6. Firing pin
- 7 Extractor RH Extractor LH
- 8 Cartridge guide RH Cartridge guide LH
- Extractor spring clip
- 10 Front stud
- 10A Stock assembly stud
- 11 Receiver pin
- 12 Bolt guide RH Bolt guide LH
- 13 Spacer washer (2 reg'd)
- 14 Trigger/mag housing screw
- 15 Lock washer (2 req'd)
- 16 Trigger assembly RH Trigger assembly LH
- 17 Rear stud
- 18 Stock wood RH

Stock wood RH uncheckered

Stock wood RH youth

Stock wood RH youth camo

Stock wood RH youth camo

uncheckered

Stock wood RH youth uncheckered

Stock wood LH


Stock wood LH uncheckered


Stock color laminate RH

Stock color laminate RH uncheckered

- 19 Trigger guard
- Trigger guard/mag plate screw (2 reg'd)
- 21 Stock assembly screw (2 req'd)
- \*22 Barrel/receiver assembly RH
  Barrel/receiver assembly RH youth
  Barrel/receiver assembly RH smooth bore
  Barrel/receiver assembly LH

<sup>\*</sup> RESTRICTED TO FACTORY INSTALLATION ONLY

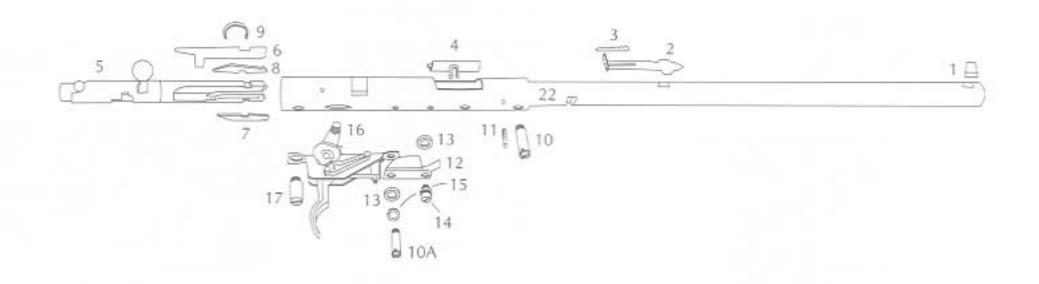

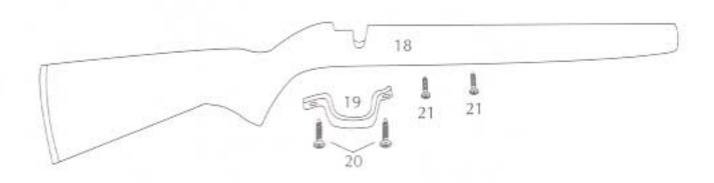

MARKI

13

## SECTION 6

#### MARK II Series

PARTS MAY BE ORDERED DIRECTLY FROM SAVAGE ARMS [PHONE 413-568-7001] BETWEEN THE HOURS OF 9:00 AND 3:30 (EASTERN STANDARD TIME). THERE IS A MINIMUM ORDER AND PLEASE ALLOW 2 WEEKS FOR DELIVERY.


PLEASE BE ADVISED THAT SOME PARTS
MAY REQUIRE FITTING. SAVAGE ARMS
BEARS NO RESPONSIBILITY FOR THE
FUNCTION OR PERFORMANCE OF ANY
FIREARM THAT HAS BEEN REPAIRED OR
MODIFIED BY OTHER THAN SAVAGE ARMS
SERVICE DEPARTMENT. AS SUCH, SAVAGE
ARMS ACCEPTS NO RESPONSIBILITY/
LIABILITY FOR ANY DIRECT AND/OR
CONSEQUENTIAL DAMAGE AND/OR INJURY
RESULTING FROM THE USE OF A FIREARM
REPAIRED OR MODIFIED BY OTHER THAN
THE SAVAGE ARMS SERVICE DEPARTMENT.

### # Description

- 1 Front sight
- 2 Rear sight
- 3 Universal elevator
- \*5 Bolt assembly RH Bolt assembly RH SS Bolt assembly LH
- 6 Firing pin
- 7 Extractor RH Extractor LH
- 8 Cartridge guide RH Cartridge guide LH
- 9 Extractor spring dip
- 10 Front stud
- 10A Stock assembly stud
- 11 Receiver pin
- 12 Bolt guide RH Bolt guide LH
- 13 Spacer washer
- 14 Trigger/mag housing screw (2 reg'd)
- 15 Lock washer (2 reg'd)
- 16 Trigger assembly RH
  Trigger assembly RH
  (synthetic stock)
  Trigger assembly RH SS
  - (synthetic stock)
    Trigger assembly LH
- 17 Rear stud
- 19 Trigger guard
- Trigger guard/mag plate screw (3 req'd)
- 21 Stock assembly screw (2 req'd)

- \*45 Barrel/receiver assembly RH
  Barrel/receiver assembly RH youth
  Barrel/receiver assembly RH heavy barrel
  Barrel/receiver assembly RH SS
  Barrel/receiver assembly LH
  Barrel/receiver assembly LH youth
  - 46 Stock wood RH
    Stock wood RH youth
    Stock wood RH laminate
    heavy barrel
    Stock wood LH
    Stock wood LH youth
    Stock synthetic RH
    Stock synthetic RH heavy barrel
    Stock synthetic RH camo
- 47 Magazine assembly 5 shot Magazine assembly 10 shot Magazine assembly SS 5 shot Magazine assembly SS 10 shot
- 48 Magazine housing Magazine housing SS
- 49 Magazine retaining spring Magazine retaining spring SS
- 50 Magazine plate
- 150 Scope base/screws (2 req'd)

<sup>\*</sup> RESTRICTED TO FACTORY INSTALLATION ONLY

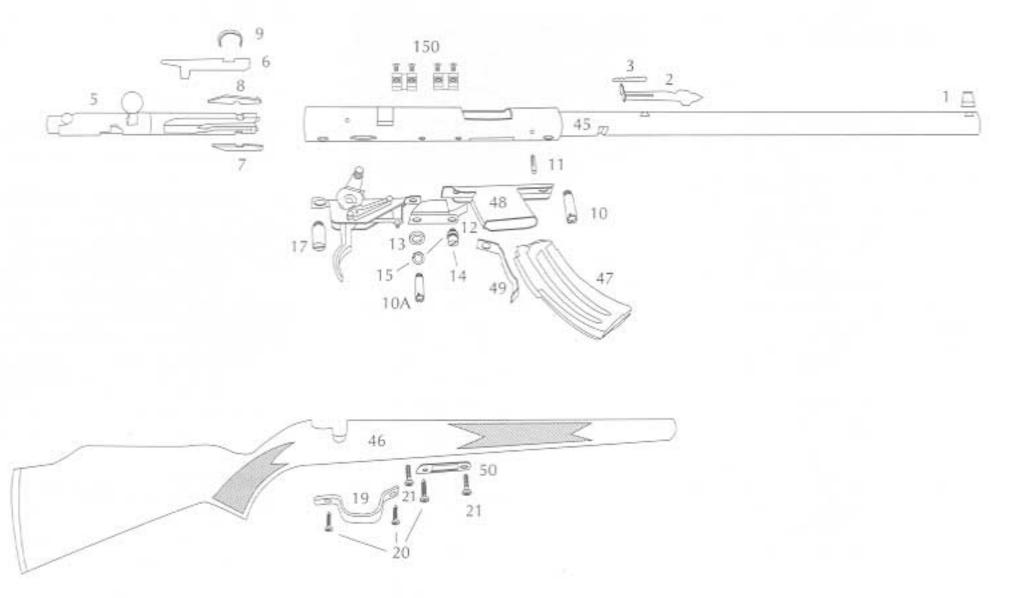

MARK II

## **SECTION 7**

#### Model 93 Series


PARTS MAY BE ORDERED DIRECTLY FROM SAVAGE ARMS [PHONE 413-568-7001] BETWEEN THE HOURS OF 9:00 AND 3:30 (EASTERN STANDARD TIME). THERE IS A MINIMUM ORDER AND PLEASE ALLOW 2 WEEKS FOR DELIVERY.

PLEASE BE ADVISED THAT SOME PARTS
MAY REQUIRE FITTING. SAVAGE ARMS
BEARS NO RESPONSIBILITY FOR THE
FUNCTION OR PERFORMANCE OF ANY
FIREARM THAT HAS BEEN REPAIRED OR
MODIFIED BY OTHER THAN SAVAGE ARMS
SERVICE DEPARTMENT. AS SUCH, SAVAGE
ARMS ACCEPTS NO RESPONSIBILITY/
LIABILITY FOR ANY DIRECT AND/OR
CONSEQUENTIAL DAMAGE AND/OR INJURY
RESULTING FROM THE USE OF A FIREARM
REPAIRED OR MODIFIED BY OTHER THAN
THE SAVAGE ARMS SERVICE DEPARTMENT.

Description
Front sight
Rear sight
Universal elevator
Extractor RH
Extractor LH
Cartridge guide RH
Cartridge guide LH
Extractor spring clip
Front stud
Stock assembly stud
Receiver pin
Trigger assembly RH
Trigger assembly RH SS
Trigger assembly RH
(synthetic stock)
Trigger assembly RH SS
(synthetic stock)
Trigger assembly LH
Rear stud
Trigger guard
Trigger guard/mag plate screw (3 req'd)
Stock assembly screw (2 reg'd)
Stock wood RH
Stock wood RH heavy barrel
Stock wood LH
Stock wood LH heavy barrel
Stock synthetic RH
Stock synthetic RH camo
Stock synthetic RH heavy barrel
Stock color laminate RH heavy barrel

Bolt guide RH Bolt guide LH 52 L'bar L'bar SS 53 Magazine retaining spring Magazine retaining spring SS L'bar screw (2 reg'd) 54A Lock washer (2 reg'd) 55 Magazine assembly Magazine assembly SS Barrel/receiver assembly RH Barrel/receiver assembly RH heavy barrel SS Barrel/receiver assembly RH SS Barrel/receiver assembly LH Barrel/receiver assembly .17HMR RH Barrel/receiver assembly .17HMR RH SS Barrel/receiver assembly .17HMR RH heavy barrel Barrel/receiver assembly .17HMR RH heavy barrel SS Barrel/receiver assembly .17HMR LH heavy barrel Bolt assembly RH Bolt assembly RH SS Bolt assembly LH Recoil lug Recoil lug screw Magazine plate Firing pin Scope base/screws (2 reg'd) Scope base/screws SS (2 reg'd)

<sup>\*</sup> RESTRICTED TO FACTORY INSTALLATION ONLY

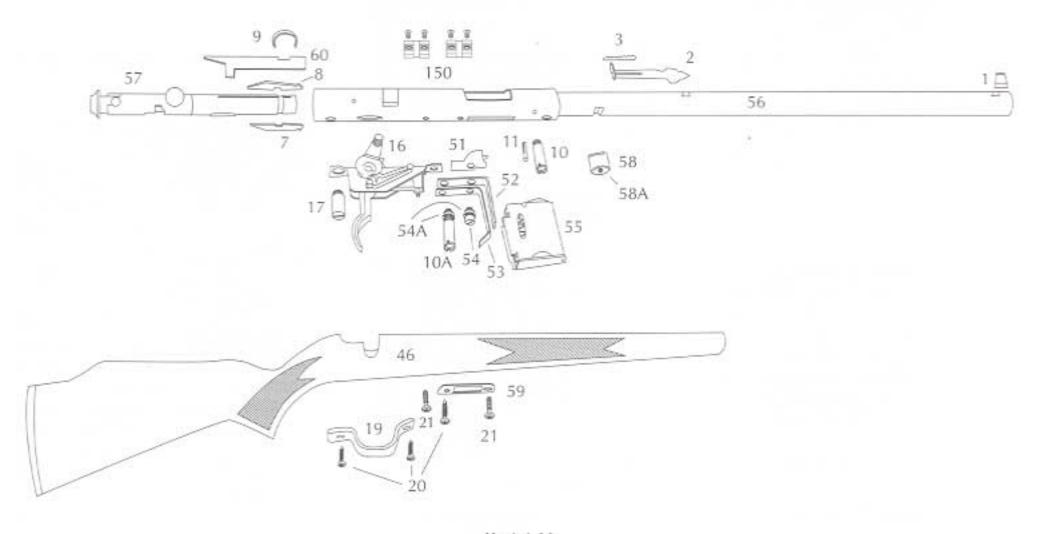

Model 93

# **SECTION 8**

#### STRIKER Series

PARTS MAY BE ORDERED DIRECTLY FROM SAVAGE ARMS [PHONE 413-568-7001] BETWEEN THE HOURS OF 9:00 AND 3:30 (EASTERN STANDARD TIME). THERE IS A MINIMUM ORDER AND PLEASE ALLOW 2 WEEKS FOR DELIVERY.

PLEASE BE ADVISED THAT SOME PARTS
MAY REQUIRE FITTING. SAVAGE ARMS
BEARS NO RESPONSIBILITY FOR THE
FUNCTION OR PERFORMANCE OF ANY
FIREARM THAT HAS BEEN REPAIRED OR
MODIFIED BY OTHER THAN SAVAGE ARMS
SERVICE DEPARTMENT. AS SUCH, SAVAGE
ARMS ACCEPTS NO RESPONSIBILITY/
LIABILITY FOR ANY DIRECT AND/OR
CONSEQUENTIAL DAMAGE AND/OR INJURY
RESULTING FROM THE USE OF A FIREARM
REPAIRED OR MODIFIED BY OTHER THAN
THE SAVAGE ARMS SERVICE DEPARTMENT.

## # Description

#### MODELS 501, 502 & 503

- Stock assembly screw (2 reg'd)
- 2 Rear stud
- 3 Extractor RH
- 4 Cartridge guide RH
- 5 Lock washer
- 6 Scope base/screws (2 req'd) Scope base/screws SS (2 req'd)
- 7 Stock assembly stud
- 8 Trigger assembly LH Trigger assembly LH SS
- Stock synthetic .22LR
   Stock synthetic .22WMR/.17HMR
- 10 Extractor spring clip
- 29 Barrel/receiver assembly .22LR
  Barrel/receiver assembly .22WMR
  Barrel/receiver assembly .17HMR
  Barrel/receiver assembly .17HMR SS
- 32 Front stud

#### MODEL 501 .22LR

- 22 Magazine housing
- 23 Magazine assembly
- 24 Magazine retaining spring
- 25 Trigger/mag housing screw
- 26 Bolt guide RH
- 27 Firing pin
- 28 Spacer washer
- \*30 Bolt assembly .22LR

#### MODEL 502 .22WMR & 503 .17HMR

- 12 Recoil lug
- 12A Recoil lug screw
- 13 L'bar L'bar SS
- 14 Magazine assembly SS Magazine assembly SS
- 15 Magazine retaining spring Magazine retaining spring SS
- 16 L'bar screw
- 17 Bolt guide RH
- 18 Firing pin
- 19 Bolt assembly .22WMR/,17HMR Bolt assembly .17HMR SS

<sup>\*</sup> RESTRICTED TO FACTORY INSTALLATION ONLY